




1. 安裝雨水感知器需與牆面保持垂直
2. 必須能自然接收到雨水且不會被噴頭噴到地方
3. 感應器橘色面不可朝上

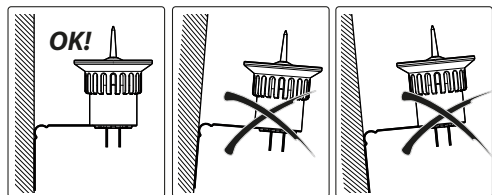

1


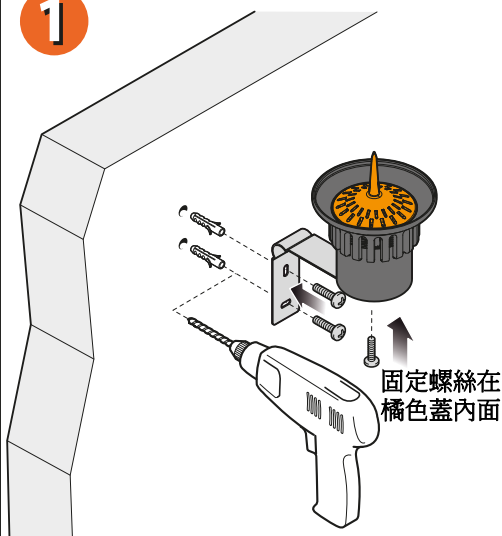


2

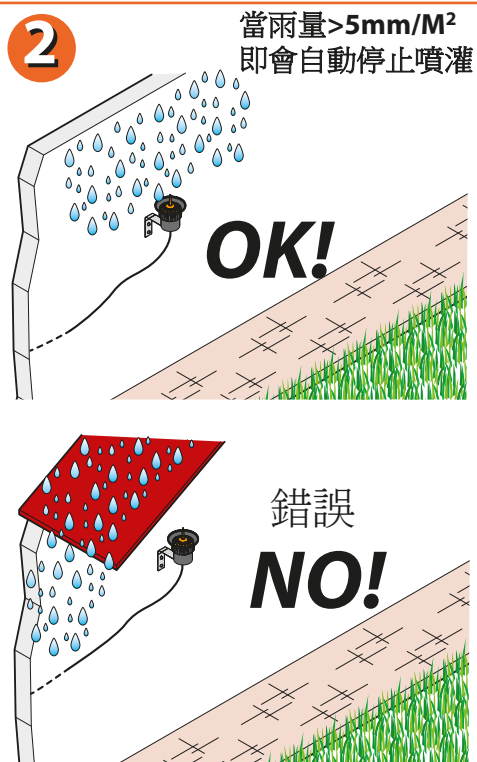


3

 NO!
橘色面不可朝上

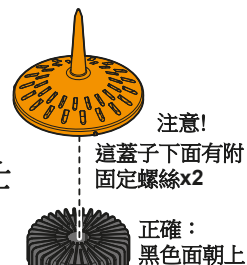

正確:
黑色面朝上

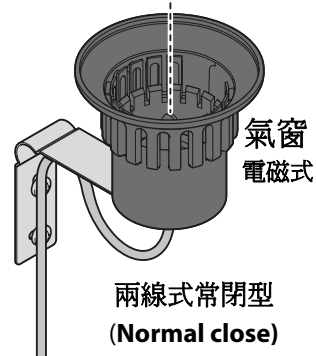

將雨水感知器連接到定時器或控制器

1




可用定時器(p/n):

8410 - 8411 - 8412 - 8413 - 8414
8415 - 8419 - 8483 - 8485 - 8486
8487 - 8488 - 8489 - 8497 - 8498

2

可用控制器 (p/n):
8058 - 8060

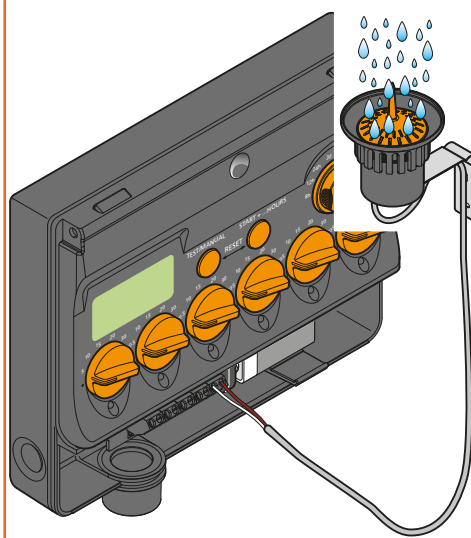


控制器已經有接點:
一條線接 S 或 R 點
一條線接 C 或 COM 點

3

控制器無接點:

- 一條線接控制器共接點(C)
- 一條線接全部電磁閥的共線

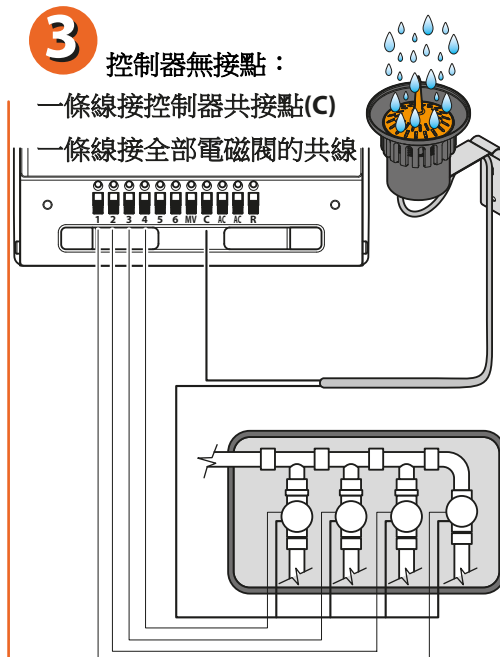

控制器電氣規格: 使用電壓 - 24VAC

可用控制器 (p/n):
8014 - 8016